

## Appendix H. Vessel Equipment Inventory Codes

Used on the Vessel and Trip Information Log.

### WHEELHOUSE ELECTRONICS

- 901 = LORAN
- 902 = Radar
- 903 = Echo Sounder
- 904 = Fax
- 905 = Plotters
- 906 = G.P.S. (Global Positioning System)
- 907 = Cellular Phone
- 908 = Vessel Tracking System
- 909 = VHF Radio
- 910 = Gyro Compass
- 911 = Navigational Echo Sounder
- 912 = Video Sounder
- 913 = Sonar (Single Direction)
- 914 = Sonar (Multiple Direction)
- 915 = Gyro Converter
- 916 = Direction Finder (Electronic Compass)
- 917 = Weather Satellite Receiver
- 918 = Wind Meter
- 919 = Satellite Navigation System
- 920 = Data Printer
- 921 = Doppler Log and Docking Sonar
- 922 = Auto Pilot
- 923 = Radio Telephone
- 924 = Watch Receiver
- 925 = Personal Computer
- 926 = Temperature Profiling System
- 927 = Single Side Band Radio
- 928 = Radio Direction Finder
- 929 = Bridge Watch
- 930 = CB Radio
- 931 = Depth Sensor
- 932 = Water Temperature Sensor
- 933 = Satellite Phone

### GEAR MOUNTED ELECTRONICS

- 937 = Headrope Transducer
- 938 = Depth Sensor
- 939 = Water Temperature Sensor
- 940 = Catch Monitor (Codend Sensor)
- 941 = Forward Scanning Headrope Sonar
- 942 = Net Width Sensor

- 943 = Water Salinity Sensor
- 944 = Net Speed Sensor
- 945 = Hull Mounted Hydrophone
- 946 = Net Pingers (actual use will be recorded elsewhere)
- 947 = Net Height Sensor
- 948 = Door Transducer

## **PROCESSING EQUIPMENT**

- 955 = Filleting Machine
- 956 = Gutting Machine
- 957 = Skate Wing Cutter
- 958 = Grading/Sorting Machine
- 959 = Shucking Machine
- 960 = Vacuum Packing Machine
- 961 = Skinning Machine
- 962 = Scale
- 963 = Conveyer Belt (for sorting catch)
- 964 = Baiter
- 965 = Pot Dumper

## **REFRIGERATION/FREEZING EQUIPMENT**

- 985 = Refrigerated Sea Water (RSW) - Flooded System
- 986 = Refrigerated Sea Water (RSW) - Spray System
- 987 = Brine Freezer
- 988 = Single Contact Plate Freezer
- 989 = Double Contact Plate Freezer
- 990 = Blast Freezer
- 991 = Holding Freezer
- 992 = Refrigerated Hull
- 993 = Ice Maker (Flaker)
- 994 = Generator (To run either refrigeration or processing equipment. Include backup generators.)
- 995 = Engine (To power refrigeration or processing equipment, NOT PROPULSION.)

## **ALL OTHER EQUIPMENT**

- 999 = Other/Unknown